


User manual

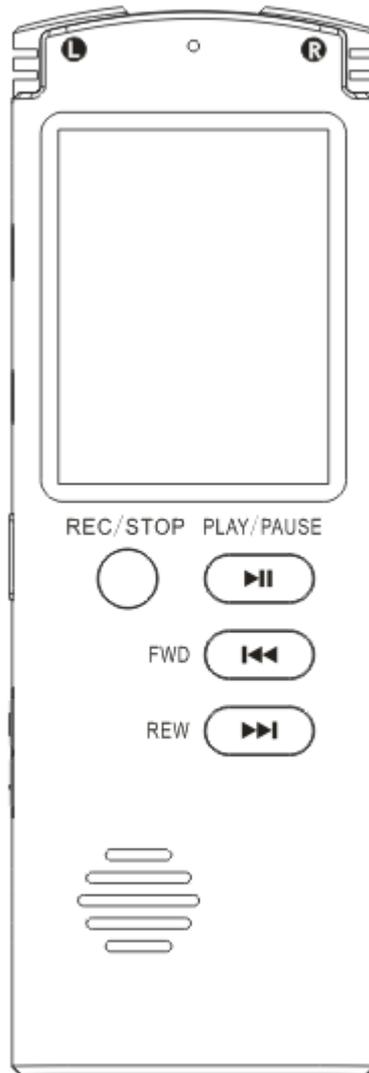


It is important to read this instruction prior to using your new product for the first time.

Contents

General controls.....	
Display.....	
Player on/off.....	
Setting day and time.....	
Using MENU key.....	
Recording.....	
Normal playback.....	
A-B repeat.....	
Erasing files.....	
PLAY MUSIC.....	
Telephone recording	
Keys lock.....	
Using your player as a file storage device.....	
Notes for safety.....	


General controls

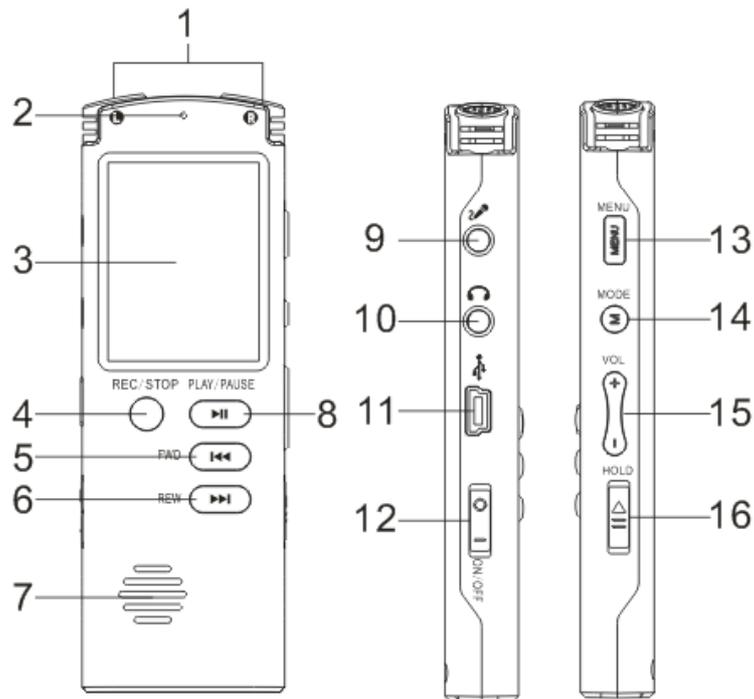

1. Built-in microphone
2. Recording LED
3. Display screen
4. Record and stop key
5. **FWD** – skips/searches backward, selects/browses in the player menu
6. **RWD** – skips/searches forward, selects/browses in the player menu.
7. Speaker
8. **PLAY/PAUSE** - turns on/turns off player, starts or pauses playback

9. **MIC** – External microphone jack
10. **EAR** – External earphone jack
11. USB jack
12. **POWER** – power switch
13. **MENU** – press once to access the player menu for various settings
14. **MODE** – press once to access the music player/press to enter A-B repeat at playing state
15. **VOLUME** – adjust volume
16. Key lock selector

Display

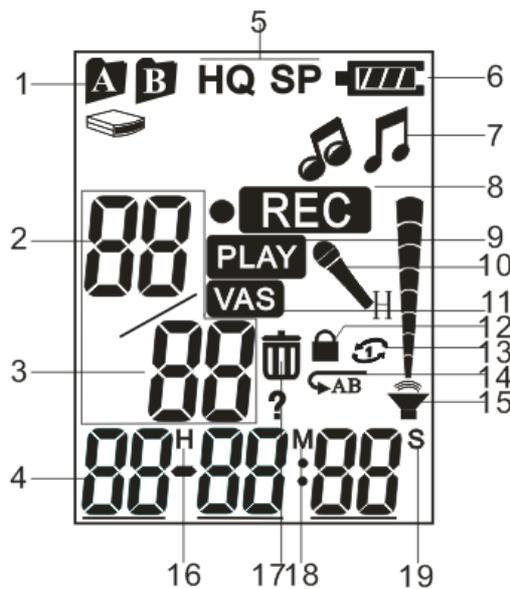

- | | |
|--------------------------------------|---|
| 1. Folder (A/B) | 11. Automatic voice recording activated |
| 2. File selected | 12. Key lock indicator |
| 3. Total number files of in a folder | 13. Cycle indicator |
| 4. Area for display messages | 14. A-B repeat |
| 5. Recording qualities | 15. Volume level indicator |
| 6. Battery level indicator | 16. H - hour |
| 7. Music display indicator | 17. Erase file indicator |
| 8. Recording in progress | 18. M - minute |
| 9. Playback in progress | 19. S - second |
| 10. Recording indicator | |

Player on/off


Slide the power key toward the **ON /OFF** icon to turn on or turn off the player.

Setting day and time

With day and time set, you can always read on the display the recording date and time of your recorded messages.

Follow the steps below for setting day and time:


1. Press and hold **MENU** for about 2 seconds and release the button. The first item year (default year: 2009) flashes on display.
2. When year item flashes, press **VOL +/-** to adjust the value.
3. After year is set, press **▶▶** or **◀◀** to set month, day 12/24 hour display, hour and minute. Follow the operations in step 3 for settings.
4. After day and time is set, press **▶▶** to confirm.

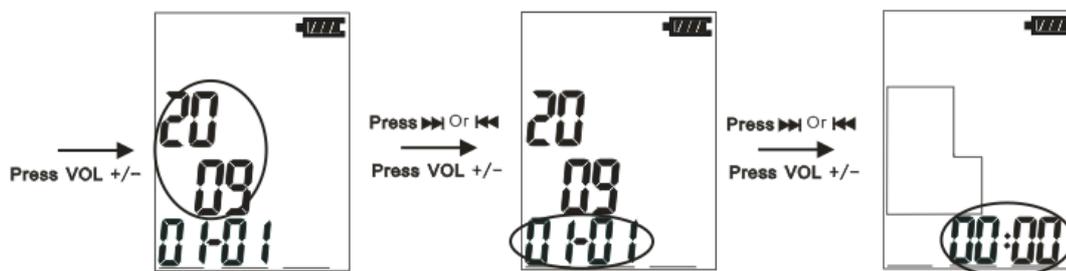

Using MENU key


Accessing player menu:

1. Press **MENU** once and release the button, then the first item folder (A/B) flashes on display.

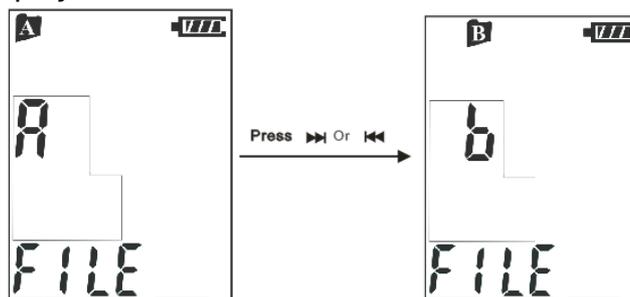

Press **▶▶** or **◀◀** to select folder then press **▶▶** to confirm


2. Then press **MENU** once again repeatedly to select the following other menu items:

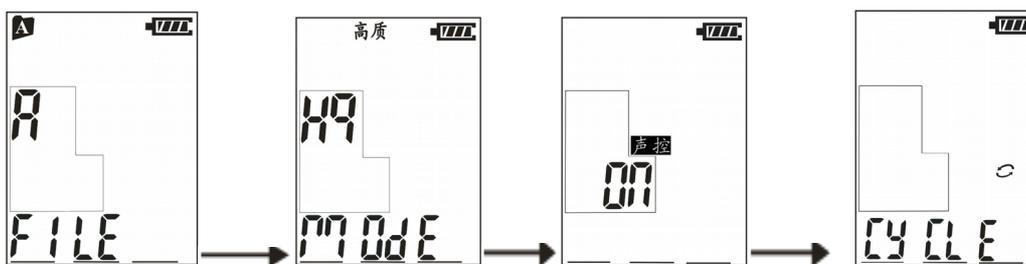

3. Press ►► or ◀◀ to make selections.
4. Press ►| to confirm your selection and exit setting.

Recording

1. While playback is stopped, press **REC/STOP** to start recording. Recording time will be displayed once you press **REC/STOP**.
2. To pause recording, press ►| once, press again to resume recording.
3. To stop recording, press **REC/STOP**.

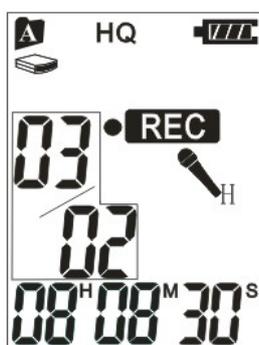


Normal playback

1. Select a folder and a file.
2. Press ►| to start playback.
3. Press ►| to pause playback, press again to resume.
4. You can press **VOL +/-** to adjust listening volume.
5. Press ►► or ◀◀ to make selections and hold ►► or ◀◀ to make quick search within a file.
6. Press **REC/STOP** to stop playback.

A-B repeat

1. At playing state, press **MODE** key to enter **A-B** repeat mode, then light on \overleftarrow{AB} icon. And set starting point A, press **MODE** again to select repeat ending point B. then play continuously the contents of A-B point.
2. Press **MODE** to exit from **A-B** repeat mode.

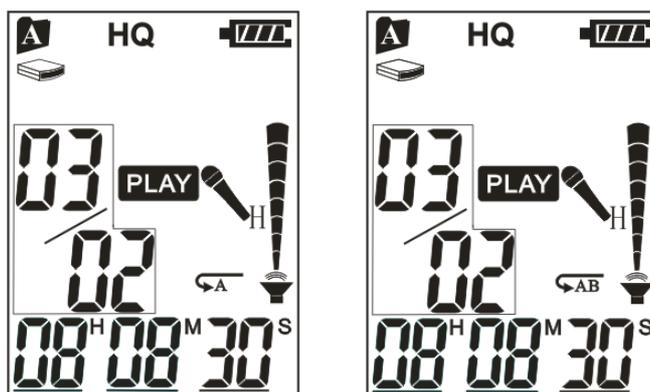


starting point A

ending point B

Erasing files

To delete a file:

1. While playback is stopped, press **▶▶** or **◀◀** to select a file.
2. Press and hold **MODE** for about 2 seconds, the Erasing icon  will appear on the display.

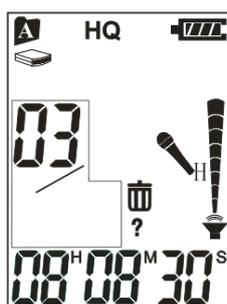


To delete a file

4. Press **▶|** to confirm deleting.

Erasing all files in a folder:

1. While the  appear on the display, press **▶▶** or **◀◀**, then **ALL** appears on the display.

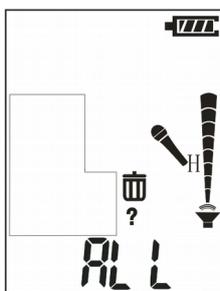

Erasing all files

2. Press **▶|** to confirm deleting. Then all files in the selected folder will be

erased completely.


PLAY MUSIC

1. While playback is stopped, press **MODE** once to access music function.
2. The  will appear on the display.
3. Press  to start playback.
4. Press  to pause playback, press again to resume.
5. You can press **VOL +/-** to adjust listening volume.
6. Press  or  to make selections and hold  or  to make quick search within a file.
7. Press **REC/STOP** to stop playback.



Telephone recording

1. Connect junction box with indoor telephone line, attached telephone line, and LINE-IN line, and then connect it with the recording pen (following diagram).

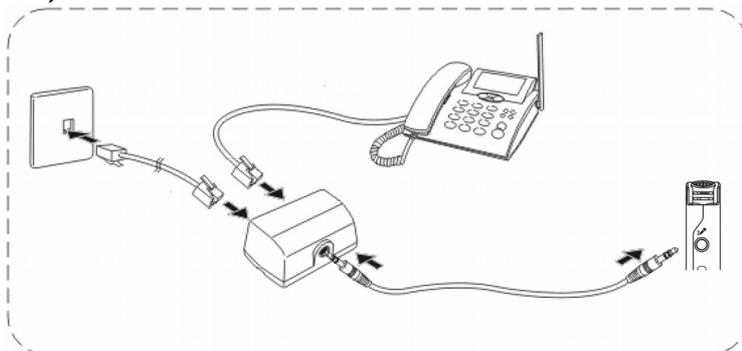

2. After entering record state, press Record key to record telephone call.

Keys lock

To avoid accidental key activation, slide the key lock selector toward the lock icon (**HOLD**) to lock the keys. Reverse the step to unlock them.

Using your player as a file storage device

The player can function as a detachable data storage device. You can take along your favorite pictures and documents wherever you go. Simply cut-and-paste or drag-and-drop files to or from it via USB connection, the player will appear as a removable drive in Windows.

Notes for safety

Charge up

Don't lie the machine on the bed, under the pillow and the place where can be reach by children.

Waterproofness

The machine has not waterproofness, please keep dry and clean

Recording file integrity

Make sure keep the "reset" key on this side of the arrowhead when the recorder is running, otherwise file is lost.

Interference

Keep away from the electronic interference.

Children

Keep children away from the recording pen especially when charging up.

USB file Uploading/Downloading

At data transfer between recorder and PC, the system prompts BUSY, and the connection can not be disconnected, otherwise data is lost